## Senders

## (for teleflex marine instruments)

| Application Guide  |                  |   |  |  |
|--|------------------|---|--|--|
|  |                  |   | SIGNAFLEX ACCEPTS 7/8 UNF-18<br>.104* CLASS 2A THD.  |  |
| SENDER TYPE  | CODE             | PART<br>NUMBER  | SENDER SOUARE<br>IA96042 TANG  |  |
| Signaflex Sender (Diesel Signaflex Tachs):<br>Sender Drive Tang, .104" square x .104" square<br>Sender Drive Tang, .104" square x .152" dia.<br>Sender Drive Tang, .104" square x .187" dia.<br>Sender Drive Tang, .104" square x .203" dia.<br><i>NOTE:</i> Signaflex senders and drive tips are for domestic diese | A<br>A<br>A      | IA96042<br>52776P<br>IH59129<br>IA59335<br>5933676P<br>only and will not work | DRIVE TANG WITH SQUARE END (52776P)  |  |
| properly with offshore makes such as Lehman, Renault, Volvo, Ya<br>Magnetic Proximity Sender (Diesel Tachs):   |                  |   | CODE B<br>MAGNETIC<br>PROXIMITY<br>SENDER<br>1507678P  |  |
| <b>Pressure Sender (1/8 NPT Thread):</b><br>Single Station (240-33 Ohm):<br>0-80 PSI<br>0-100 PSI  | C<br>C<br>C      | IA15001<br>IA15016  | CODE C<br>PRESSURE SENDERS   |  |
| Dual Station (120-17 Ohm):<br>0-80 PSI<br>0-100 PSI  | C<br>C           | IA15003<br>IA15023  | CODE D<br>TEMP. SENDERS<br>120°-240°F  |  |
| <b>Temperature (120°-240°F):</b><br>Single Station (240 Ohm @ 120°F):<br>1/8 NPT Thread, 120°-240°F  | D                | 52320S010   | CODE E<br>TEMP. SENDERS<br>STEWART-WARNER®<br>MATCH  |  |
| 1/4 NPT Thread, 120°-240°F<br>3/8 NPT Thread, 120°-240°F<br>1/2 NPT Thread, 120°-240°F   | D<br>D<br>D<br>D | 52320S000<br>52320S004<br>52320S009<br>52320S003                              | CODE F FLANGE MOUNTING DETAIL:<br>FUEL SENDER<br>(SINGLE STATION)                                  |  |
| Dual Station (120 Ohm @ 120°F):<br>1/4 NPT Thread, 120°-240°F<br>3/8 NPT Thread, 120°-240°F<br>1/2 NPT Thread, 120°-240°F  | D<br>D<br>D      | 52320S016<br>52320S018<br>52320S017   | 2.85<br>68<br>72<br>72<br>72<br>72<br>72<br>72<br>72<br>72<br>72<br>72                             |  |
| <b>Temperature (140°-320°F):</b><br><b>Stewart-Warner Match</b><br><i>Single Station:</i><br>1/8 NPT Thread, 140°-320°F  | E                | 52320S006   | 2-3/16"<br>84"<br>17-3/8"<br>INDEX MARK  |  |
| 3/8 NPT Thread, 140°-320°F<br>1/2 NPT Thread, 140°-320°F   | E<br>E           | 52320S008<br>52320S020  | LEFT<br>OR<br>RIGHT<br>ARM   |  |
| Fuel (240-33 Ohm range, SAE pattern):  | F                | 90424P  | 240-33 OHM RANGE,(Bend float arm as4-24" TANK DEPTHSshown above for tanks90424Pless than 6" deep.) |  |

| SENDER TYPE  | CODE                            | PART<br>NUMBER                                    |  |  |  |
|--|---------------------------------|---|--|--|--|
| Speedometer Pitot Tube (5-80 MPH): G 56973P   (High accuracy at 5-35 MPH requires the use of Teleflex 5-35 MPH speedometers.)  |                                 |   |  |  |  |
| Electric Speedometer Sender:<br>Replacement Sender Kit w/20' Wiring harness<br>Paddlewheel & Bearing Repair Kit<br>(Paddlewheel & bearing shaft only.)   | <br>6                           | 55907P<br>55910P                                  |  |  |  |
| <b>Temperature (Outboards, C-H range):</b><br>(Water Temp Gauge Kits contain gauge & par<br>Replacement Sender Only, 1/8 NPT, 120°-240<br><i>NOTE: For Yamaha, also order adapter P/N 61886P.</i>  |                                 | at right.)<br>52320S010                           |  |  |  |
| Replacement 50°-250°F Temperature Send<br>(For pre-1995 50°-250°F gauges only.)<br><i>NOTE:</i> Notfor C-H or 120-240°F gauges.  | <b>er:</b><br>J                 | IA96035   |  |  |  |
| Engine Synchronizer Module (Std. Ignition  | n): L                           | 1508370P  |  |  |  |
| Temperature (100°-280°F, mechanical):  | Q                               | with gauge  |  |  |  |
| Diesel Alternator Tachometers T alternator<br>NOTE: Alternator must have an AC tap, usually marked "AC", "R" or "W". If such a tap is<br>not present, a local alternator repair shop can usually add one. Also, you will need to know<br>the number of magnetic poles in your alternator. Consult the alternator maker or local<br>alternator repair shop if you do not know this. Also, you will have to calculate the pulley ratio<br>from crankshaft to alternator. Tachometers are factory calibrated for several combinations of<br>poles and pulley ratios, but in almost all cases you will need a Portable Master Shop<br>Tachometer for initial calibration. See the Diesel Alternator Tach Guide in the Tech<br>Reference section for calibration and switch settings. |                                 |   |  |  |  |
| Water Pressure (0-15/0-30/0-60 PSI):<br>(Water Pressure Gauge Kits contain gauge & NOTE: For Yamaha, also order adapter P/N 61886P.  | WP<br>parts sho                 | with gauge<br>own at right.)                      |  |  |  |
| Ammeter Shunts (Direct-reading ammeters<br>Shunt for 60-0-60 Amp Ammeters<br>Shunt for 100-0-100 Amp Ammeters  | s): Z<br>Z<br>Z                 | 56246P<br>54125P                                  |  |  |  |
| Depth Sounder Transducers:<br>For 1992-date 2" Teleflex In-Dash Depth Sou<br>Transom Mount (199' depth)<br>In-Hull Mount (199' depth)<br>10-Foot Transducer Cable Extension  | <i>nders (1</i> 9<br>A A<br>A B | <b>99' models):</b><br>57045P<br>57046P<br>57047P |  |  |  |
| <b>Depth &amp; Temperature Gauge Transducers:</b><br>For 1997-date 2" Teleflex In-Dash Depth & Te<br>Transom Mount Depth/Water Temp. Sensor<br>In-Hull Depth Transducer<br>10-Foot Transducer Cable Extension  | emp Gau<br>BA<br>BB             | ges (600'):<br>61219P001<br>61225P<br>61319P      |  |  |  |
| NOTE: Depth and Depth/Temp transducers listed use a 200 MHz signal and are for<br>Teleflex depth instruments only.   |                                 |   |  |  |  |
| <b>NOTE:</b> In-hull transducers are not suitable for metal or wooden boats, where lamination exceeds 3/4" (19mm) or contains foam, Kevlar®, aricore or wood flotation/reinforcing. These tranducers must be epoxied in place without any gaps or voids in the epoxy or hull, or they will not function properly.  |                                 |   |  |  |  |
| Code "NONE REQ'D" or "N/R" or "-"  |                                 |   |  |  |  |



