

ACE BOAT HOIST

2211 S.TAMIAMI TRAIL
VENICE, FL 34293
941-493-8100/TOLL FREE 1-800-826-3573
941-493-7857 FAX

WIRING INSTRUCTIONS FOR SEALED MOTORS and MOTORS THAT HAVE WIRE LEADS INSTEAD OF TERMINAL BOARDS.

For use with these motors:

BALDOR (use "T" numbers)

DOERR (use "T" numbers)

LEESON (use "T" numbers)

MAGNETEK/CENTURY (use wire colors)

WESTINGHOUSE (use wire colors)

SMC S.S. (use "T" numbers)

110 volt

MOTOR WINDING WIRES

(blue)T1 & (orange)T3

(white)T2 & (yellow)T4

(black)T5

(red)T8

(green)Ground

to

to

to

to

to

SWITCH WIRES

Black

Orange

White

Red

Green(ground)

220 volt

MOTOR WINDING WIRES

(blue)T1

(yellow)T4

(black)T5

(red)T8

(green)Ground

to

to

to

to

to

SWITCH WIRES

Black

Orange

White

Red

Green(ground)

(white)T2 & (orange)T3 together

To reverse motor rotation: Exchange Black and Orange "SWITCH WIRES" (note: can be done at switch or motor)